



PROFIX CONCEALED FLAT STICK INSTALLATION - PROBOND FACADE FR

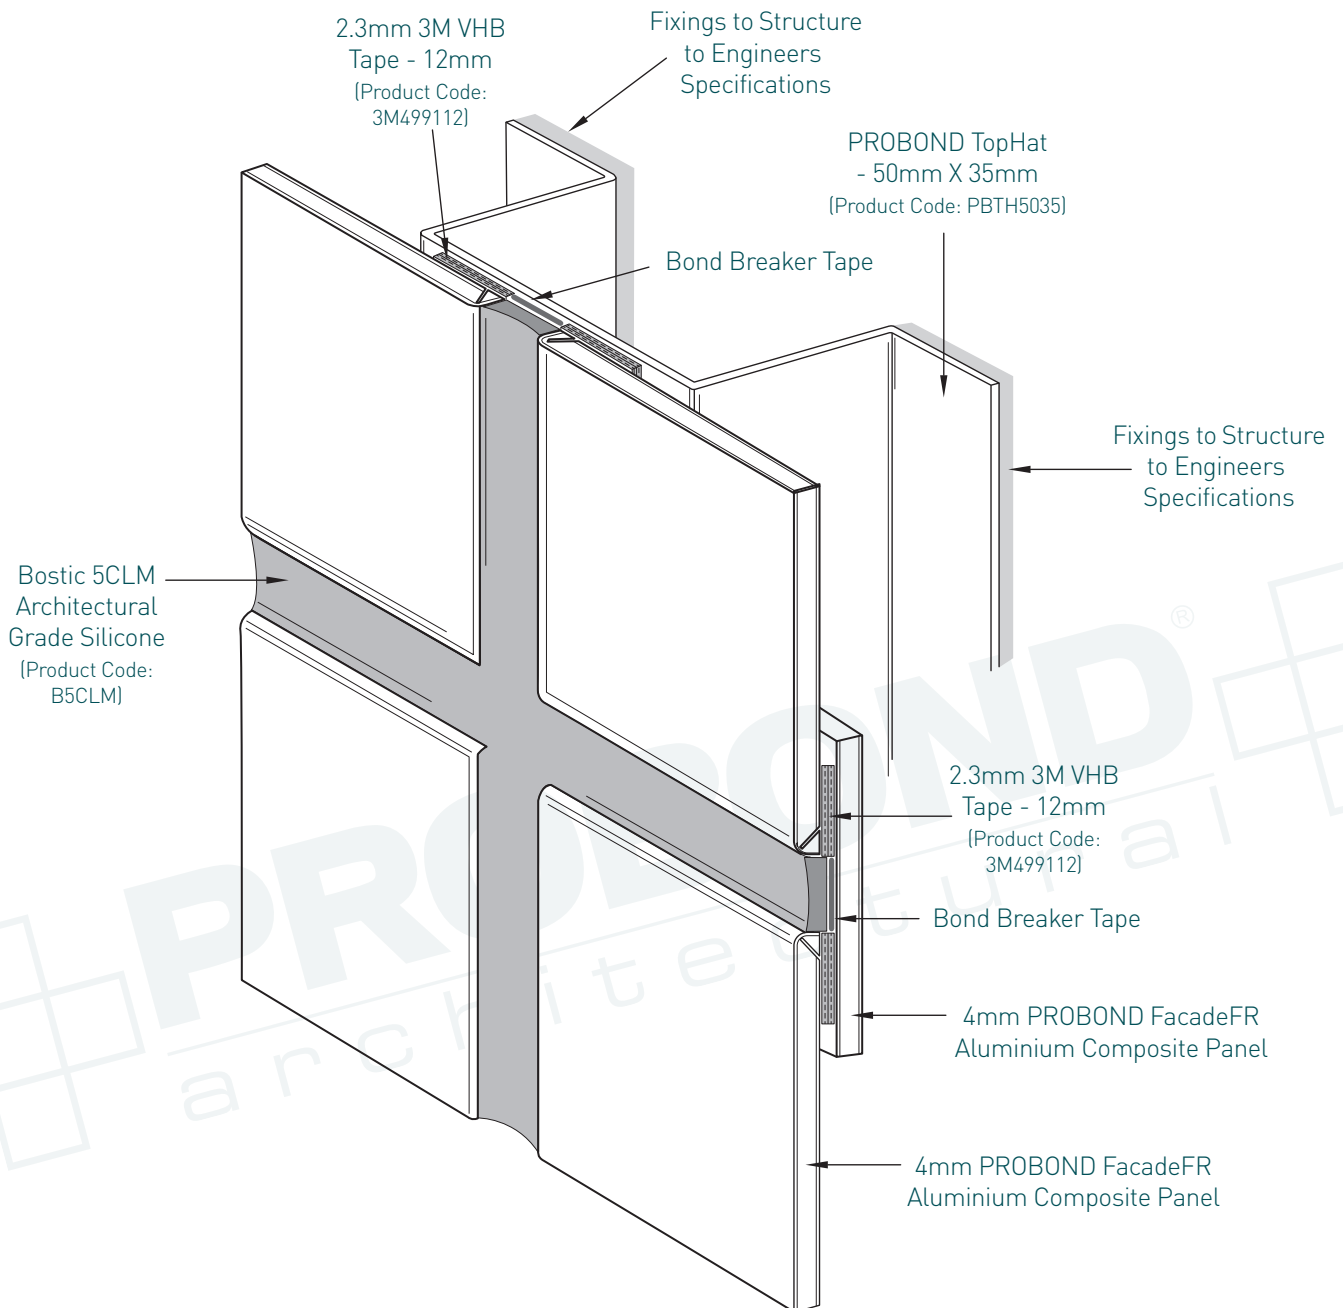


1. Face Detail - Concealed Flat Stick Installation

PROFIX CONCEALED FLAT STICK INSTALLATION - PROBOND FACADE FR

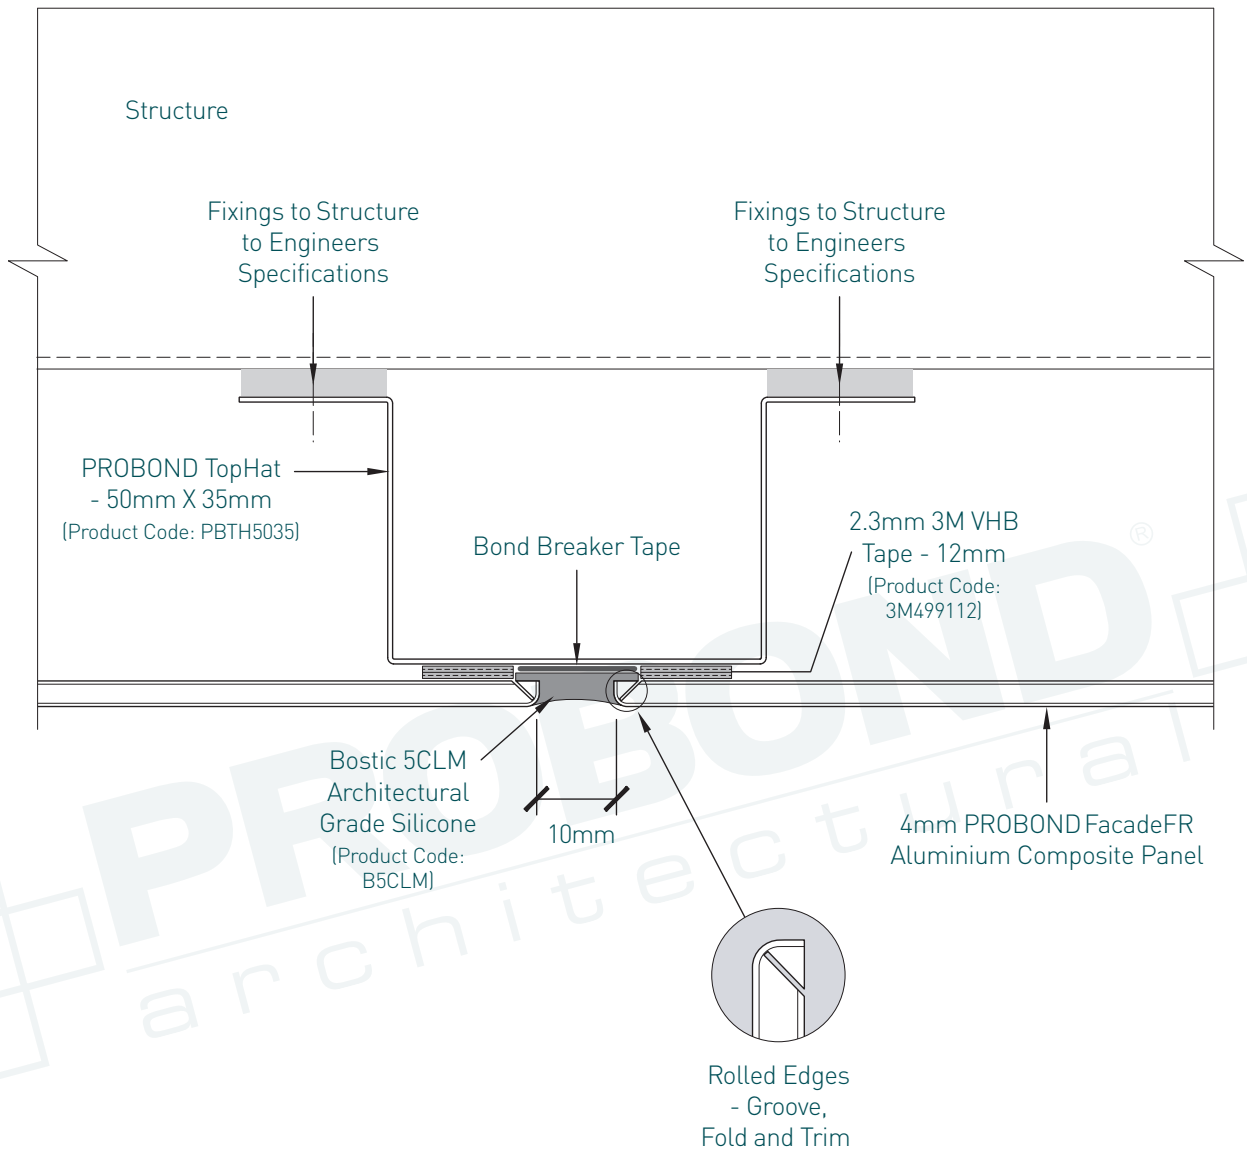


2. Typical Panel Joint Detail

PROFIX CONCEALED FLAT STICK INSTALLATION - PROBOND FACADE FR

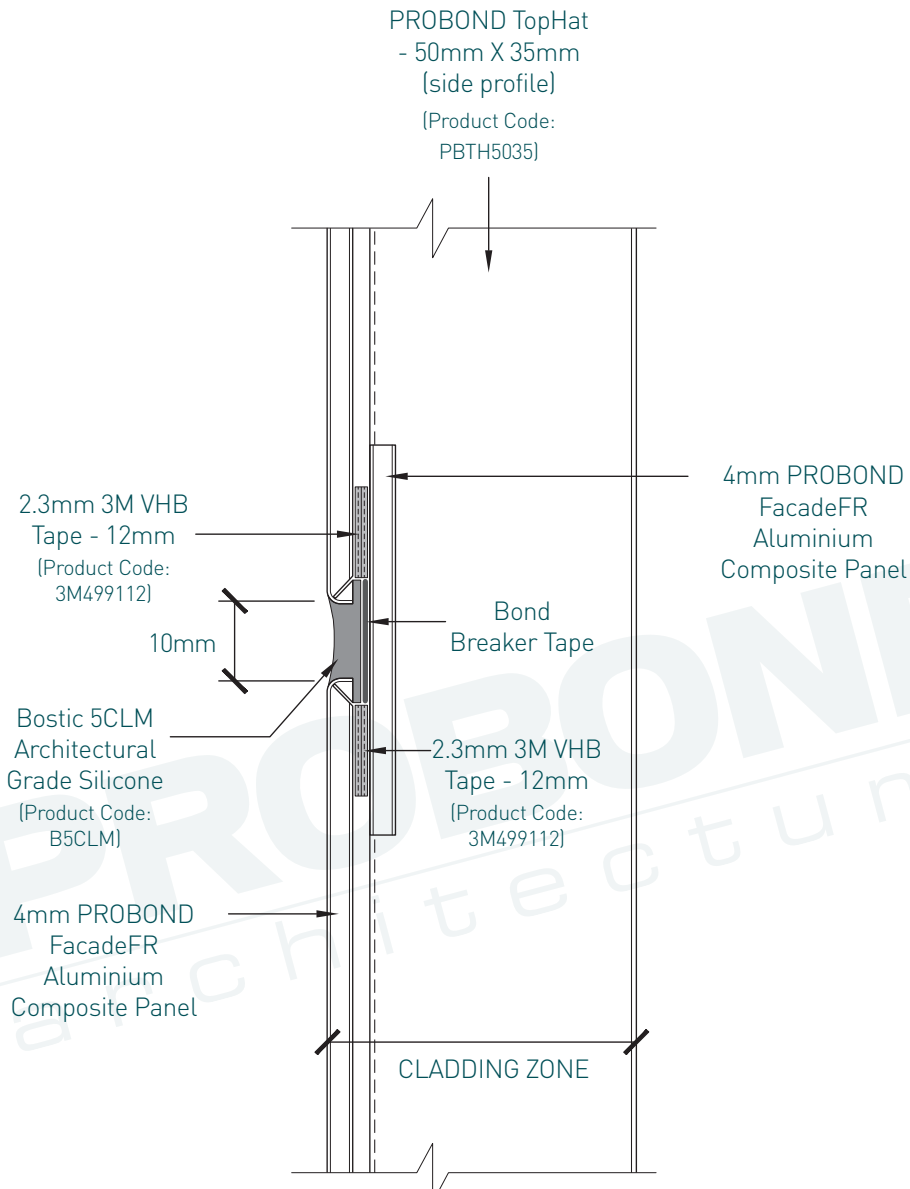


3. Horizontal Joint Detail

PROFIX CONCEALED FLAT STICK INSTALLATION - PROBOND FACADE FR

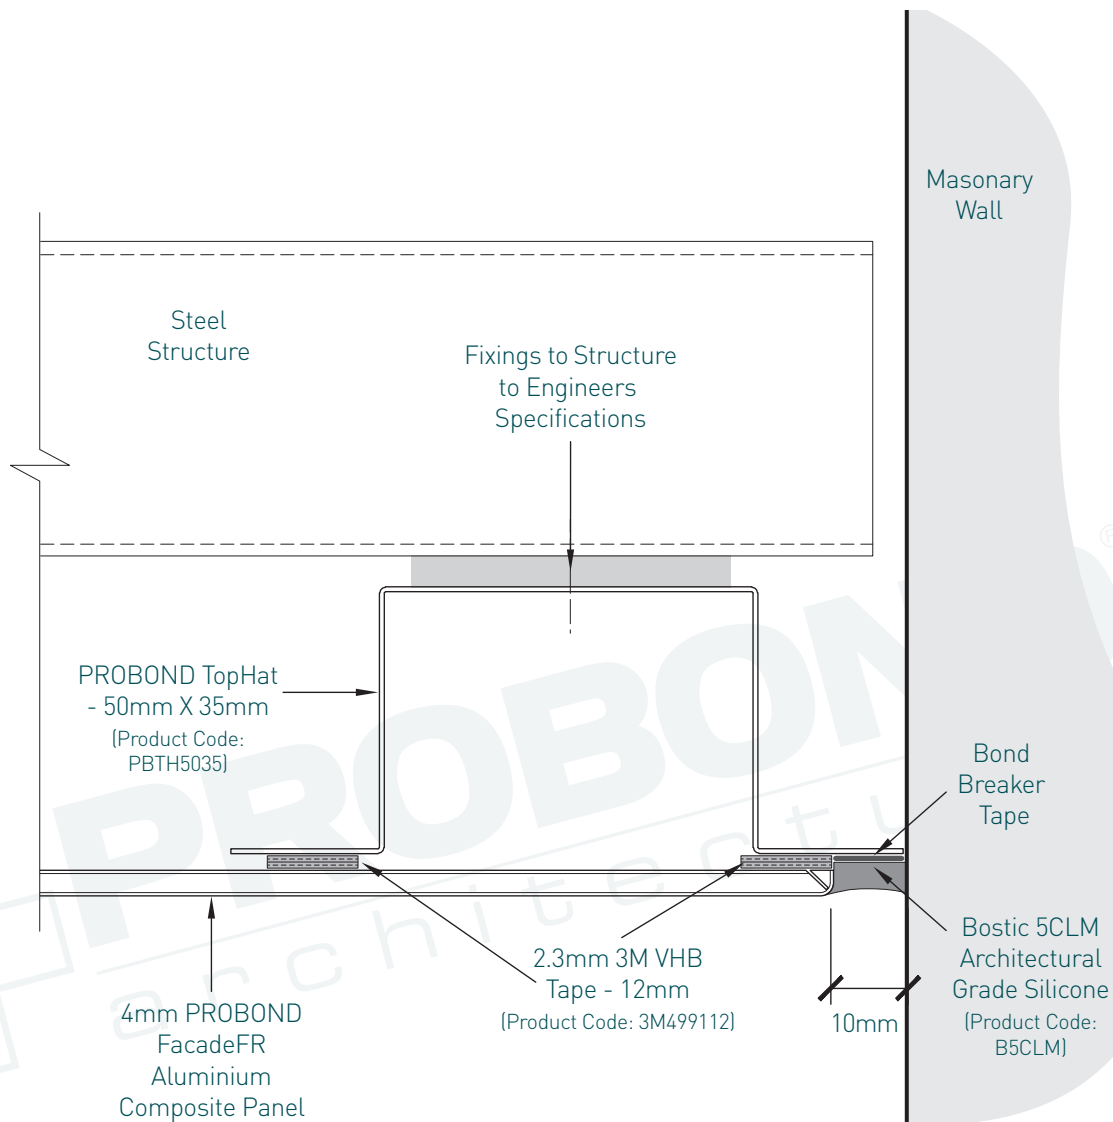


4. Detail Showing Panel at Masonry Wall

PROFIX CONCEALED FLAT STICK INSTALLATION - PROBOND FACADE FR

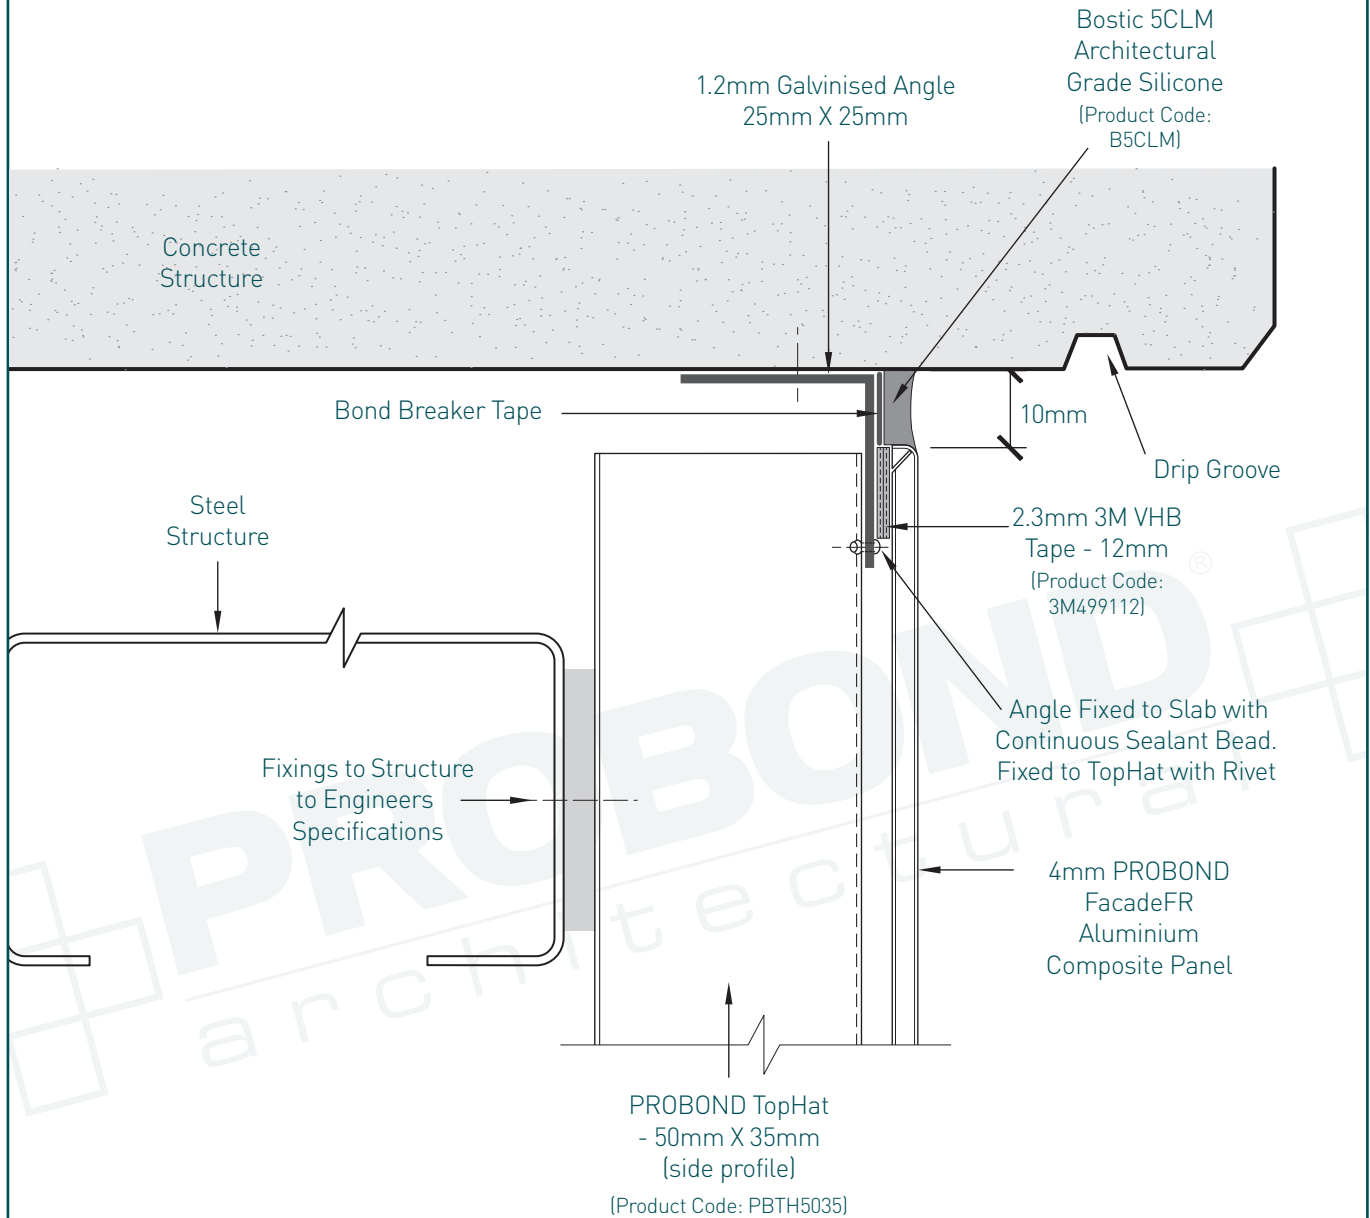


5. Detail at Slab Junction-Head

PROFIX CONCEALED FLAT STICK INSTALLATION - PROBOND FACADE FR

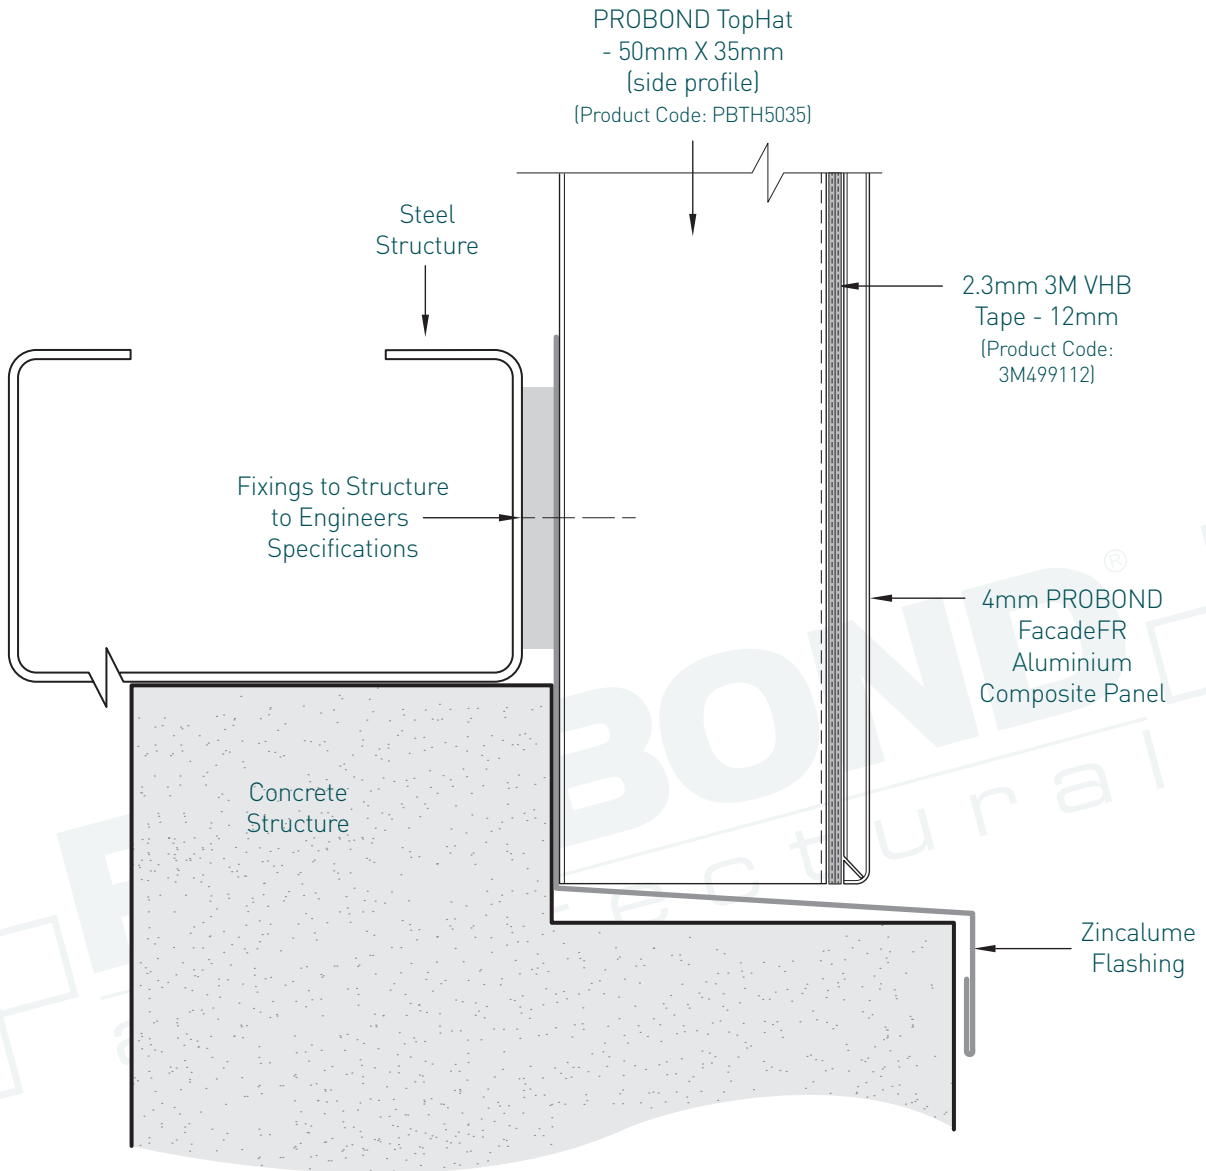


6. Detail at Slab Junction-Base

PROFIX CONCEALED FLAT STICK INSTALLATION - PROBOND FACADE FR

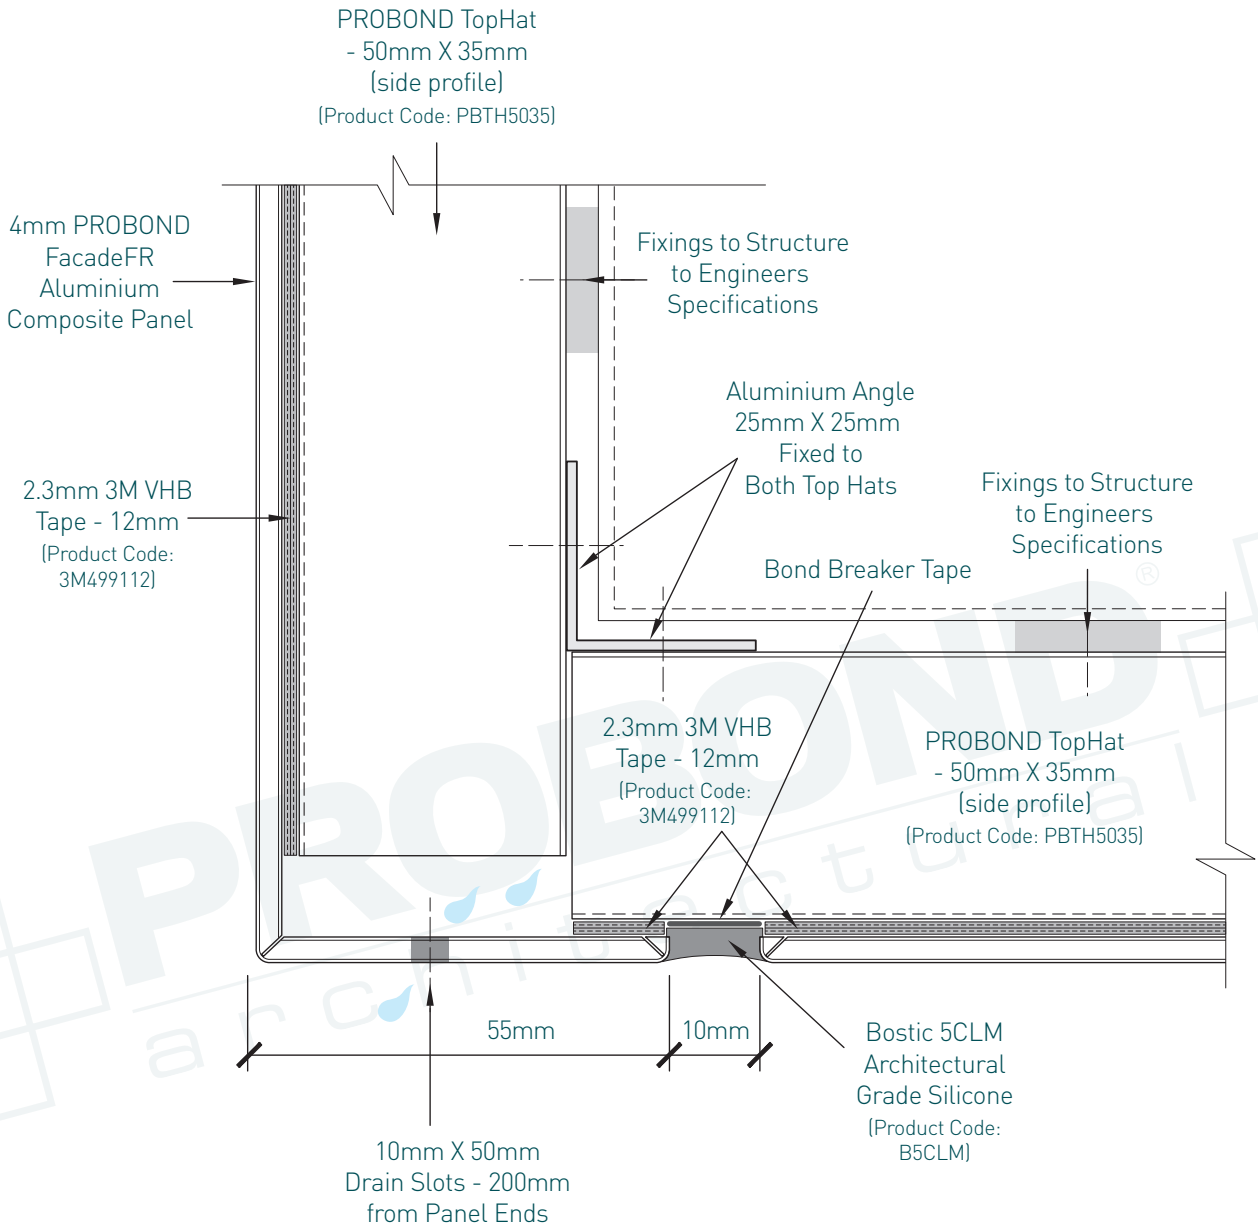


7. Detail at Soffit Junction

PROFIX CONCEALED FLAT STICK INSTALLATION - PROBOND FACADE FR

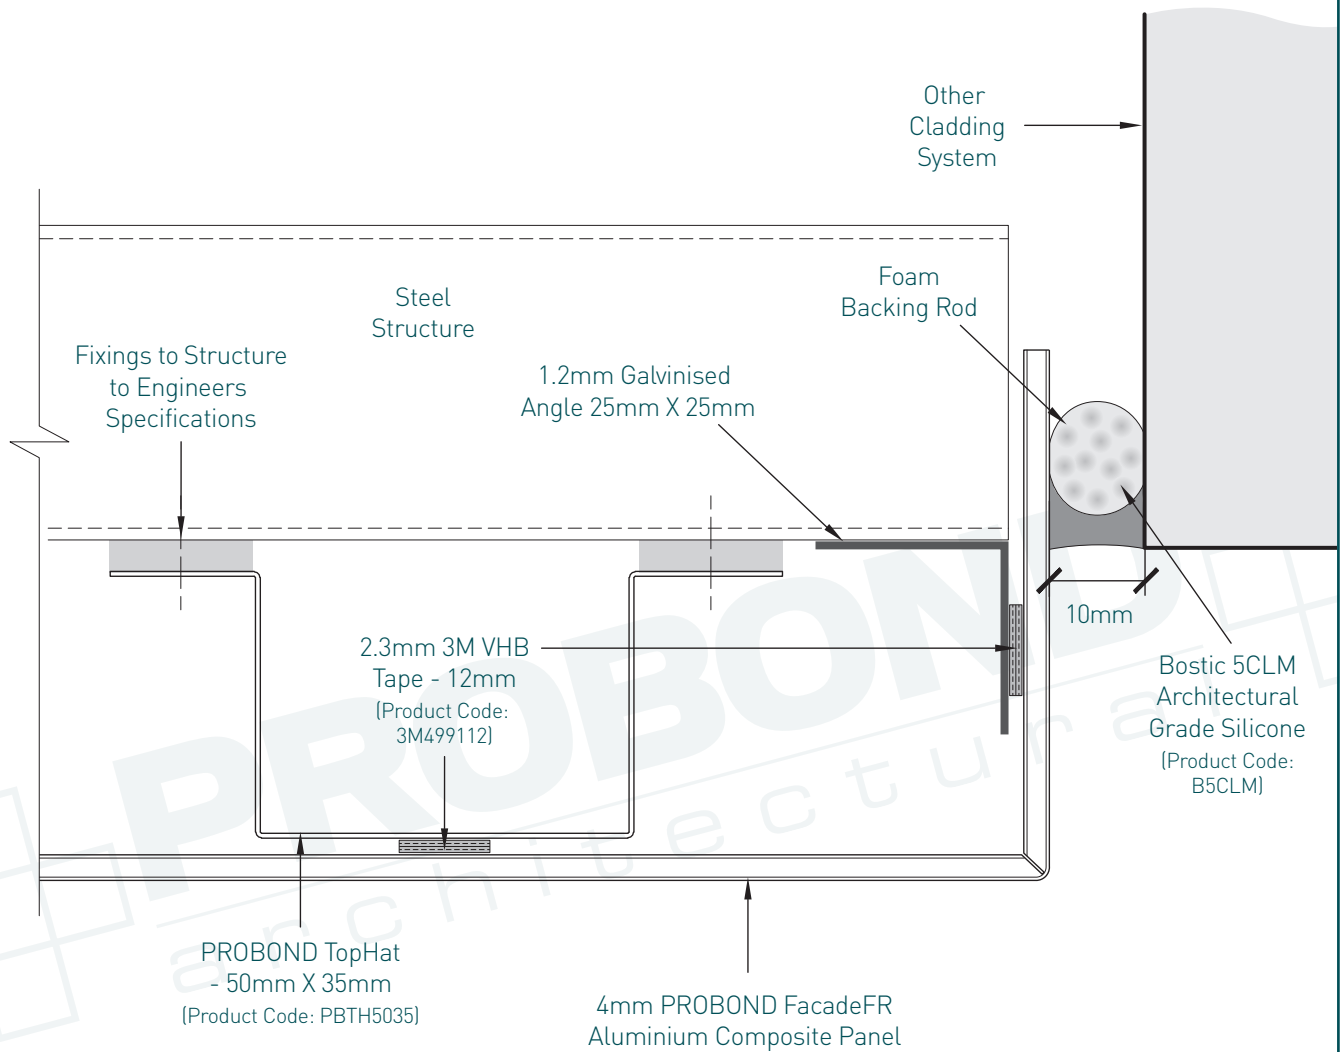


8. Wall Abutment Detail

PROFIX CONCEALED FLAT STICK INSTALLATION - PROBOND FACADE FR

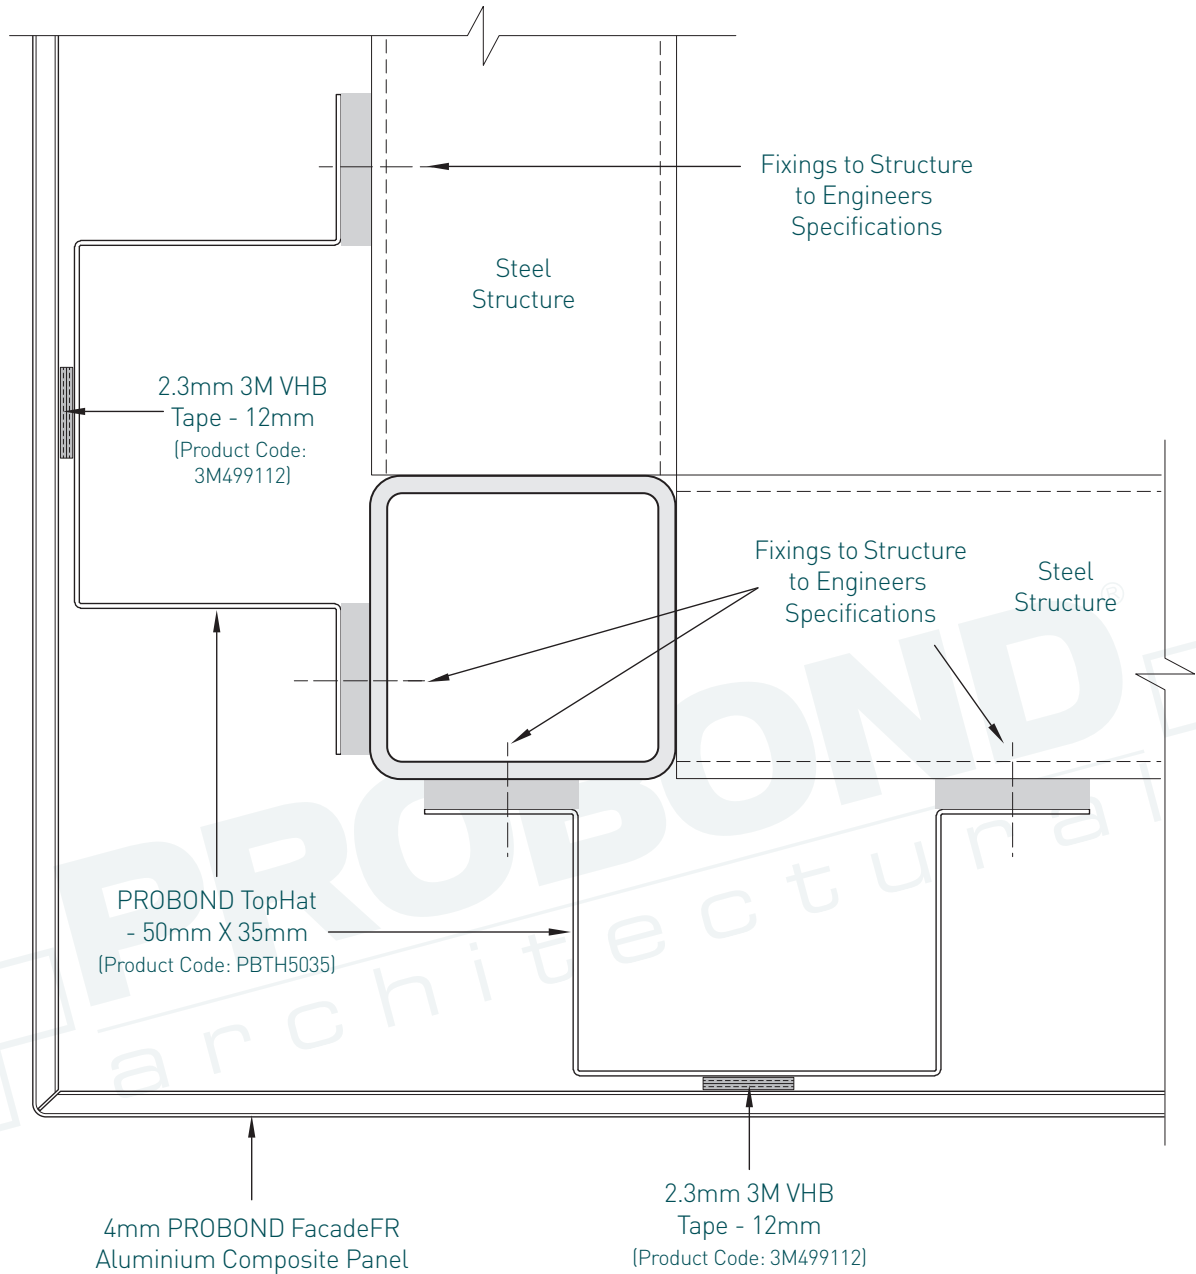


9. External Corner Detail

PROFIX CONCEALED FLAT STICK INSTALLATION - PROBOND FACADE FR

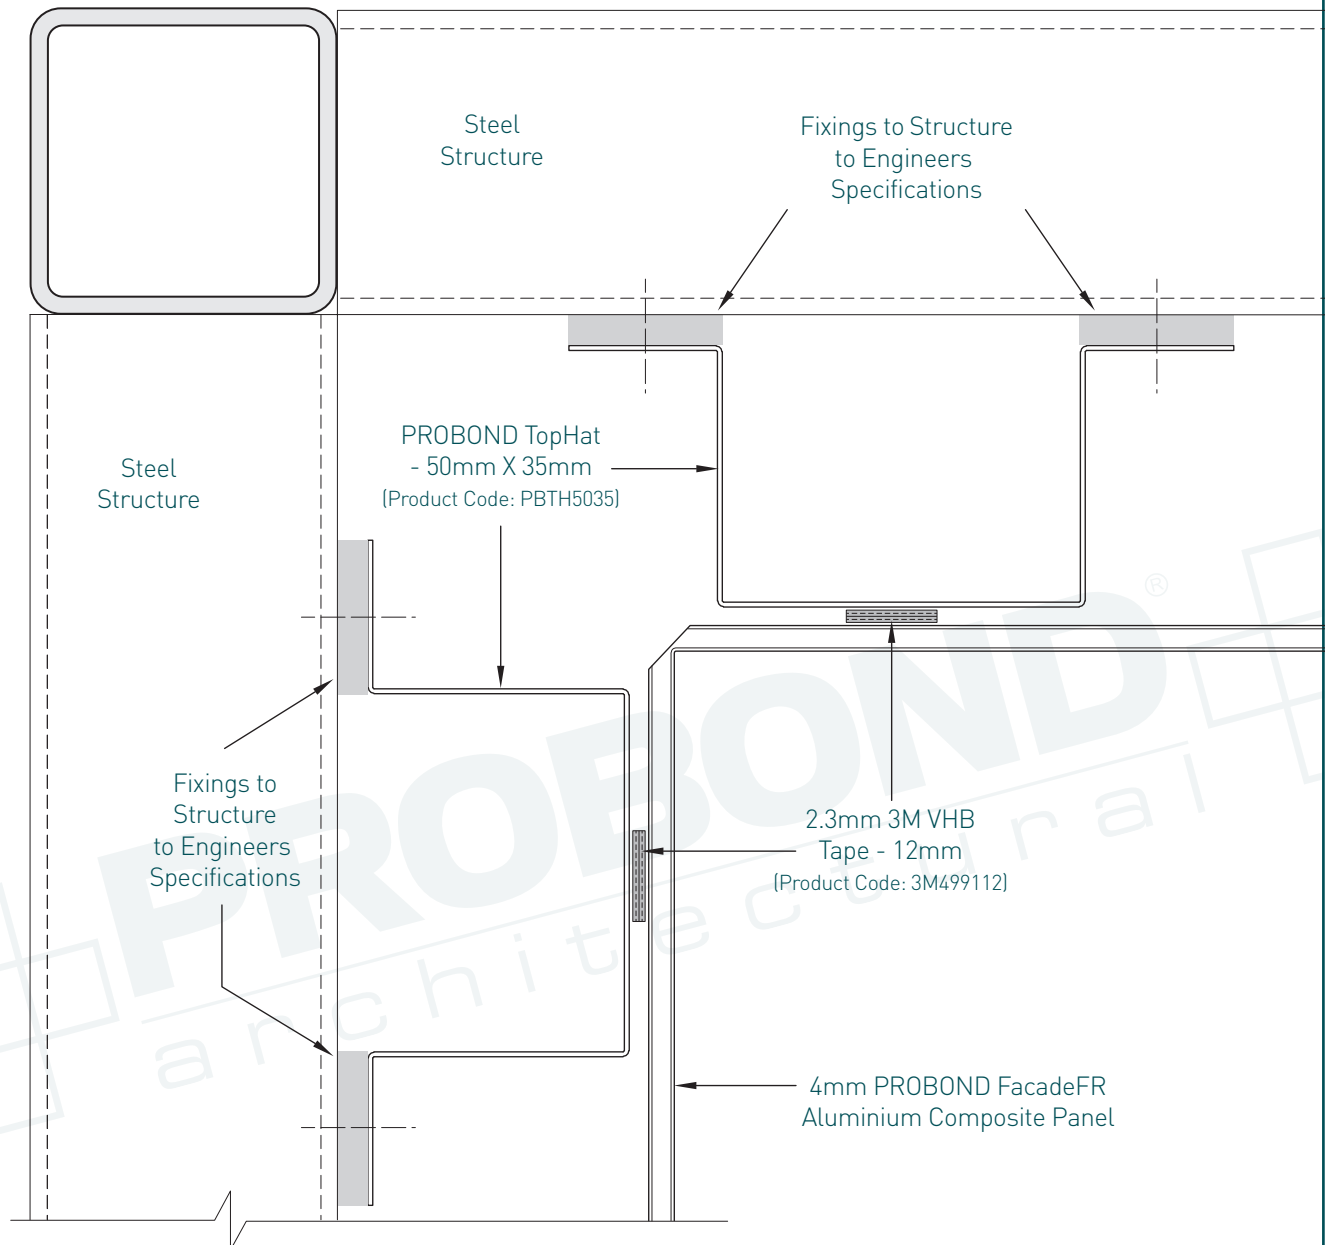


10. Internal Corner Detail

PROFIX CONCEALED FLAT STICK INSTALLATION - PROBOND FACADE FR

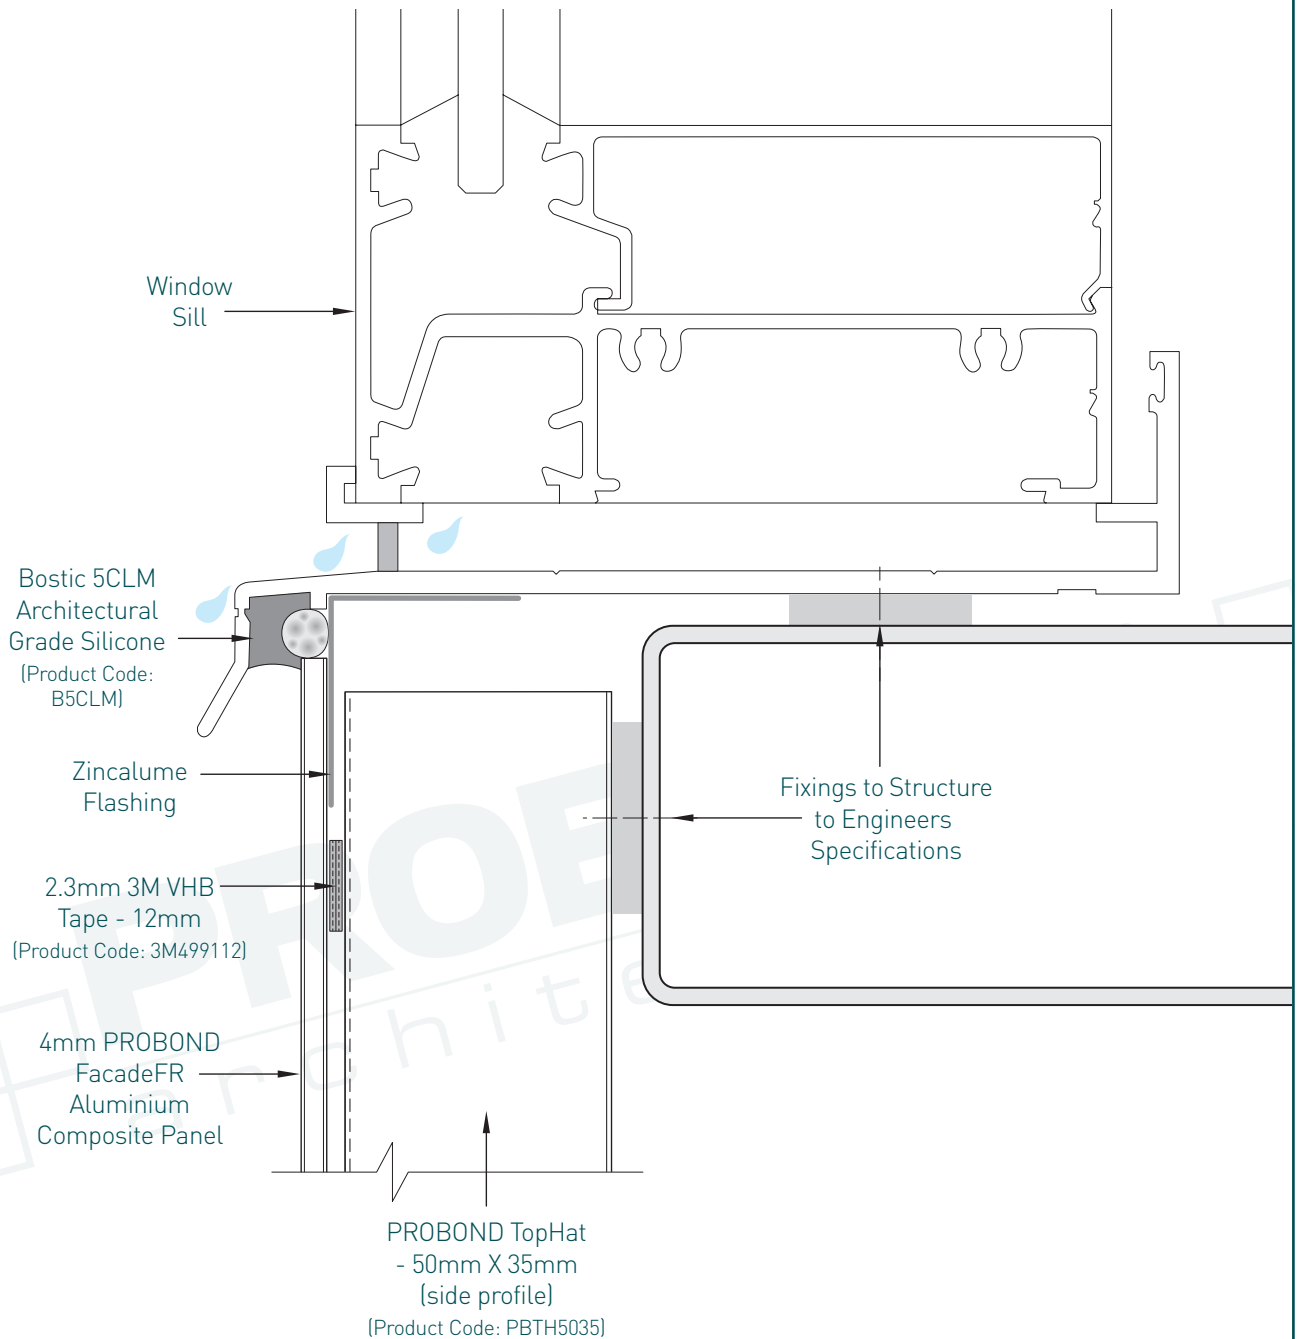


11. Window Sill Detail

PROFIX CONCEALED FLAT STICK INSTALLATION - PROBOND FACADE FR

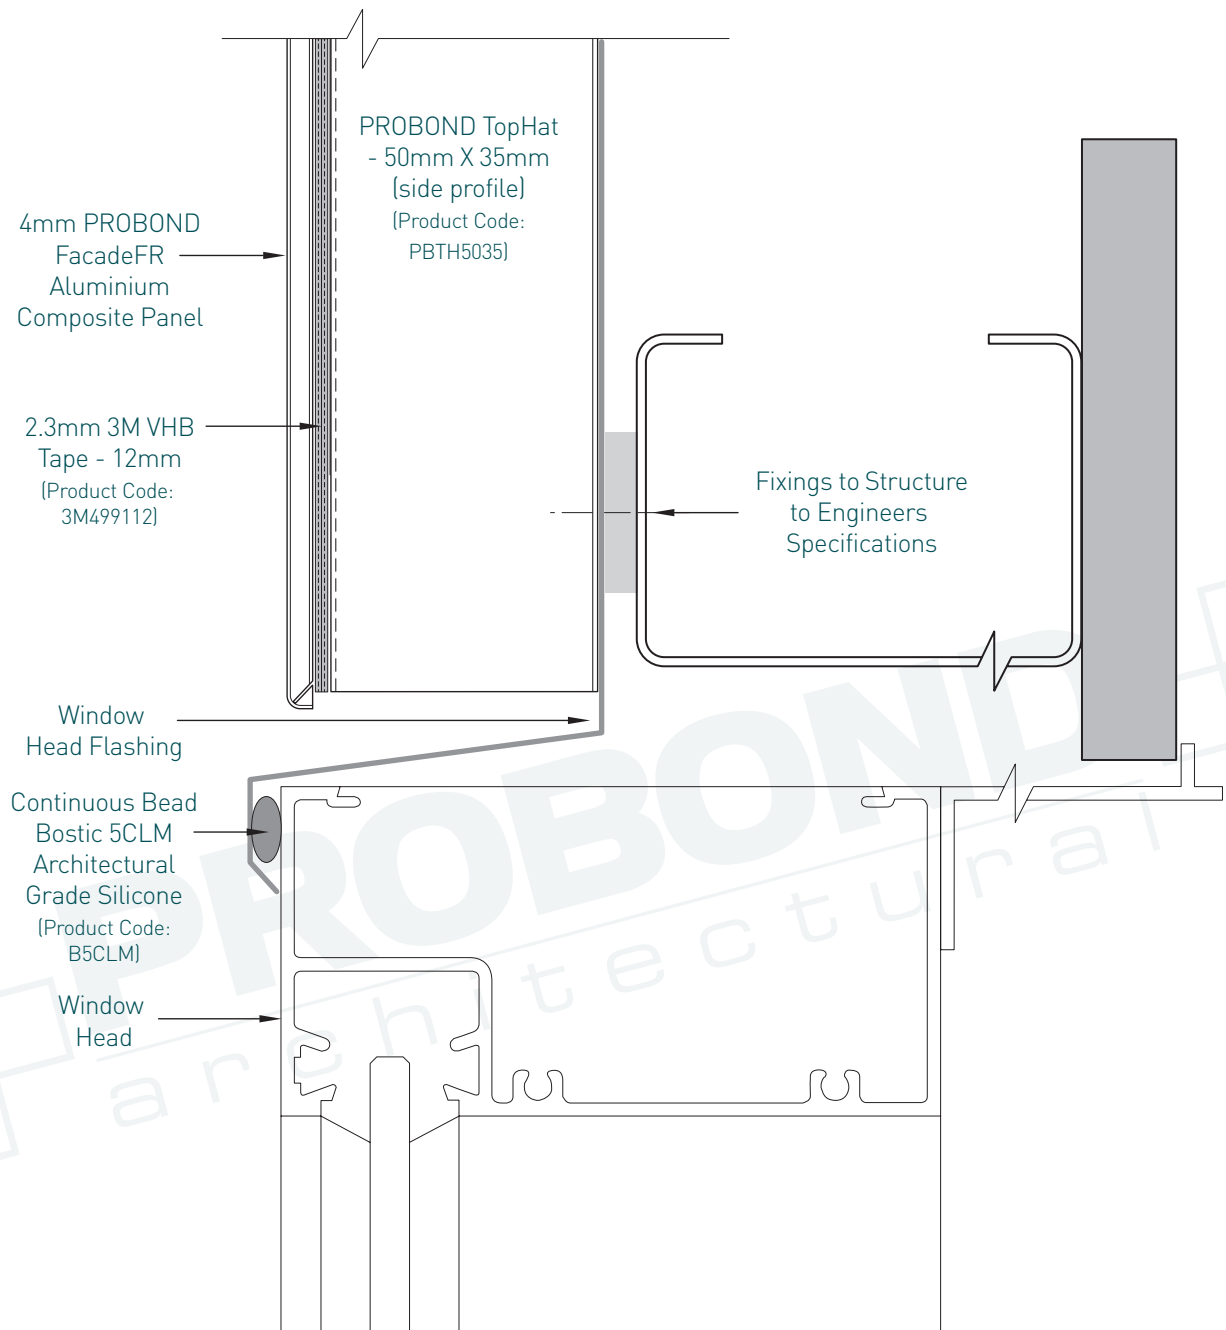


12. Window Head Detail

PROFIX CONCEALED FLAT STICK INSTALLATION - PROBOND FACADE FR

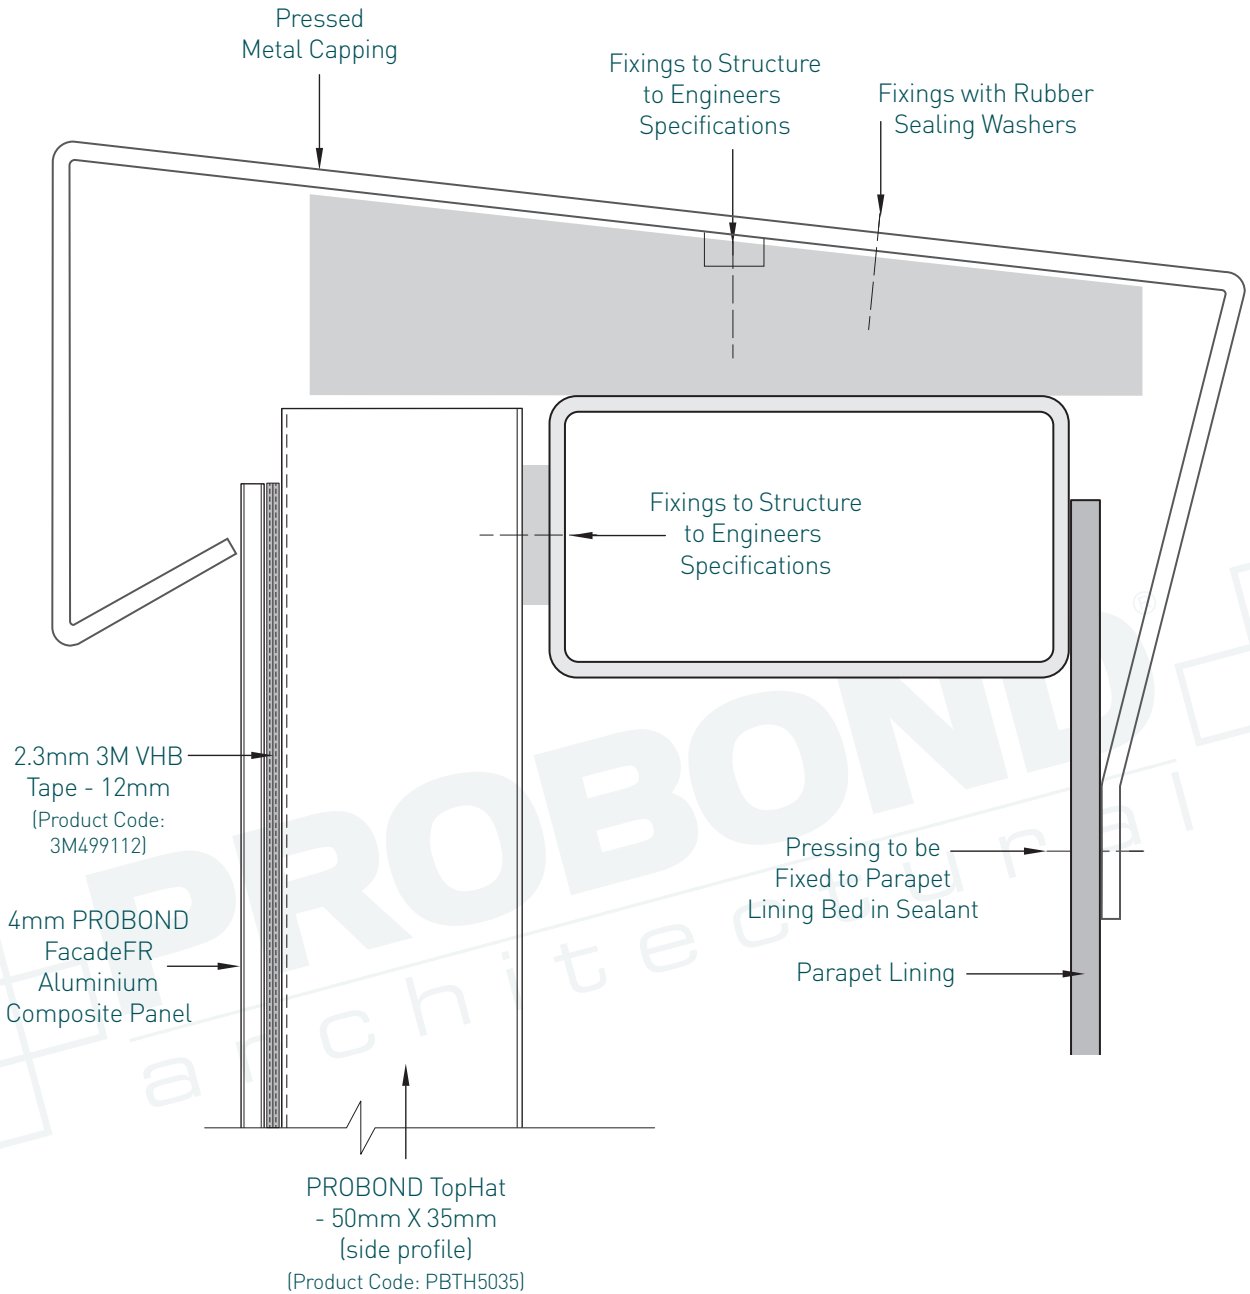

13. Parapet Capping Detail-1

PROFIX CONCEALED FLAT STICK INSTALLATION - PROBOND FACADE FR

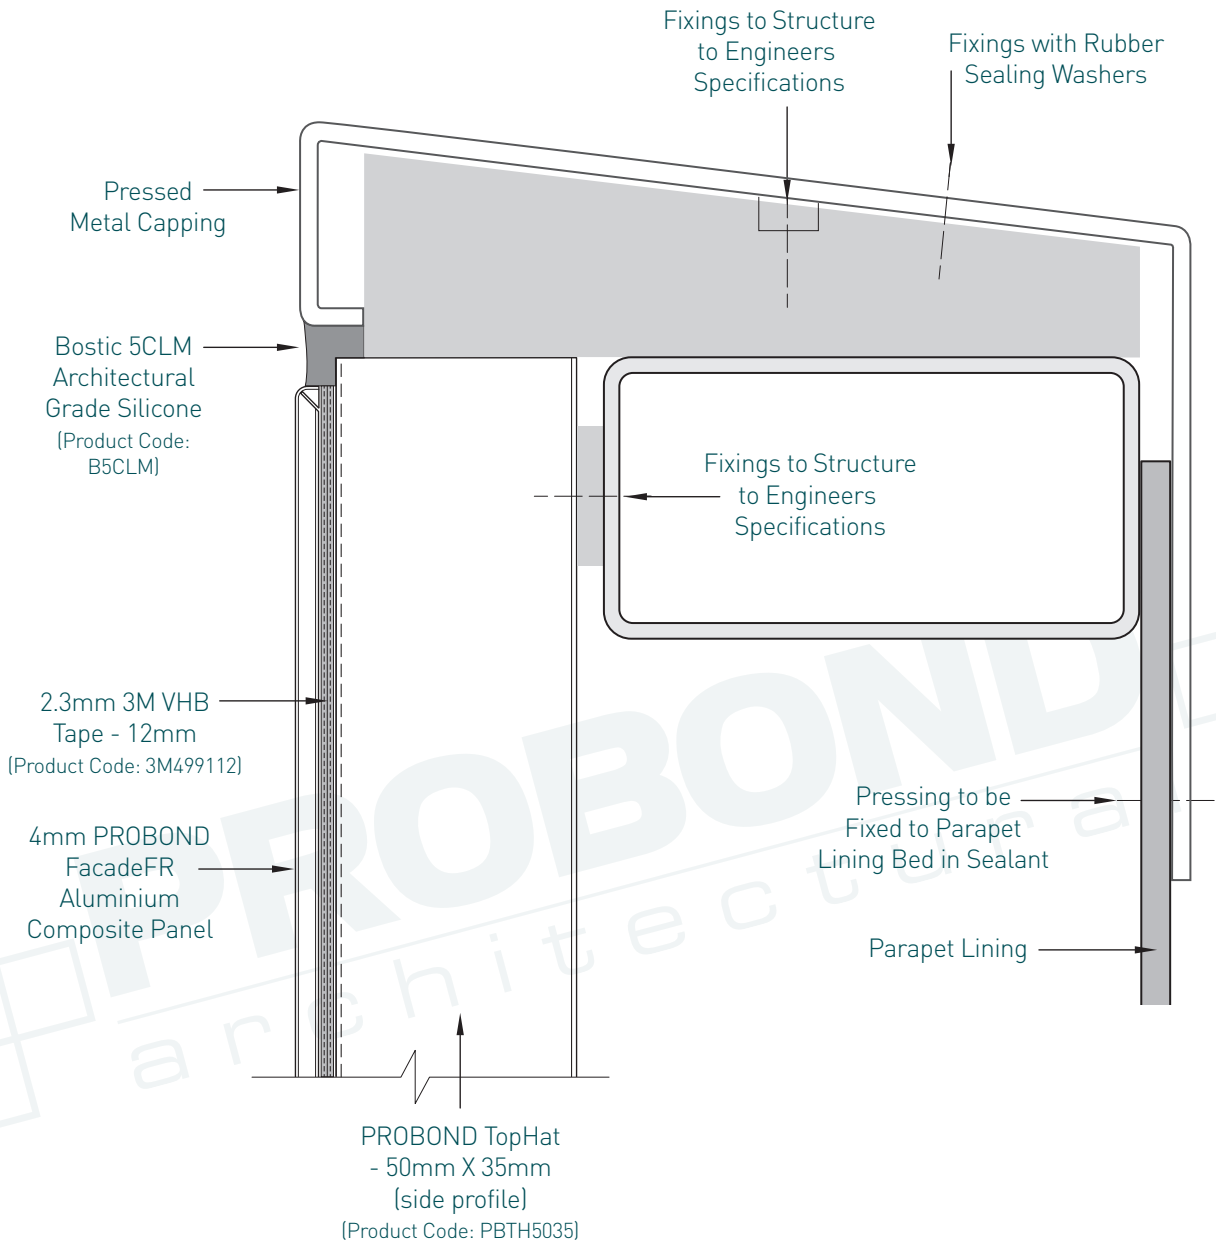

14. Parapet Capping Detail - 2